

# ECO-BARGE

The Port of Nanaimo is equipped with a floating, stand alone (solar powered) sewage reception facility located on the central breakwater at the entrance to the Commercial Inlet Basin.

## THE PORT OF NANAIMO HAS A NO DISCHARGE POLICY.

We therefore ask that you help to keep our harbour clean and do not discharge overboard any bilge, effluent, sewage or other substance that could be hazardous to people or the marine environment.

Thank you for your cooperation



## INSTRUCTIONS FOR USE

### PRIMING

REDUCE ALL NOISE  
OPEN DECK FITTINGS

START PUMP WITH NOZZLE OPEN AND IN WHITE TUBE  
PUMP WILL PRIME AFTER 30 SECONDS, CLOSE NOZZLE  
TAKE NOZZLE TO DECK FITTING AND OPEN NOZZLE

### PUMPING

THE PUMP RUNS FOR 3 MINUTES  
IF THE PUMP STOPS, CLOSE NOZZLE, ACTIVATE PUMP AND RE-OPEN NOZZLE

### RINSING THE PUMP

WHEN THE VESSELS TANK IS EMPTY,  
PLACE THE NOZZLE BACK INTO THE WHITE TUBE AND RESTART THE PUMP.  
THIS WILL RINSE THE PUMP WITH SALT WATER

### TROUBLE-SHOOTING ...

#### PUMP WILL NOT PUMP

PUT THE NOZZLE IN THE WHITE TUBE  
TRY THE WHITE TUBE ON THE OTHER SIDE OR PLACE NOZZLE DIRECTLY INTO THE WATER,  
OPEN THE PORTA-POTTY DUMP LID AND LISTEN FOR THE WATER ENTERING THE TANK  
ENSURE THE NOZZLE IS OPEN

#### THE PUMP IS PRIMED BUT WILL NOT PUMP OUT THE VESSEL

ENSURE THE NOZZLE IS IN THE CORRECT DISCHARGE PORT  
ENSURE THE VALVE IN THE VESSEL IS SET TO DISCHARGE AND NOT OVER-BOARD





